





BURNSIDE

ASSEMBLY INSTRUCTIONS


2-WAY FIXTURE :: 292/299 - 2WAY

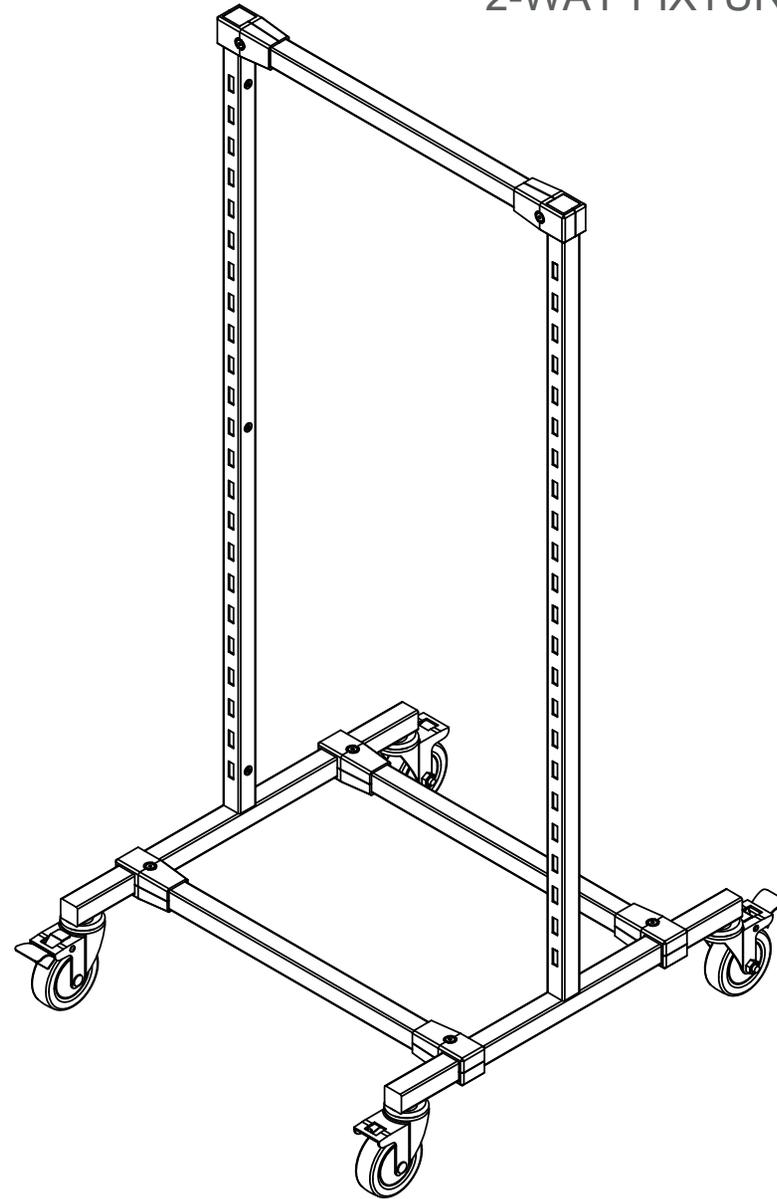


PART LIST:

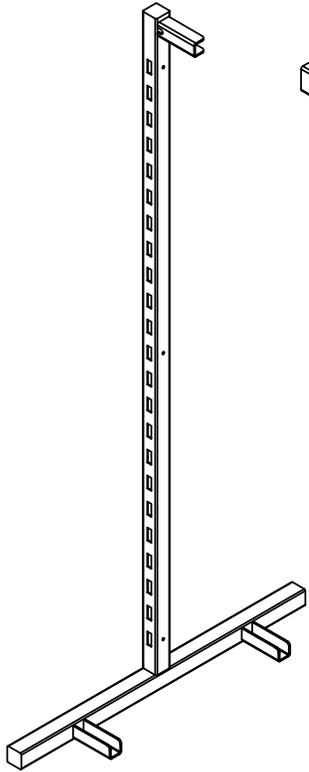


2X. SIDE FRAME

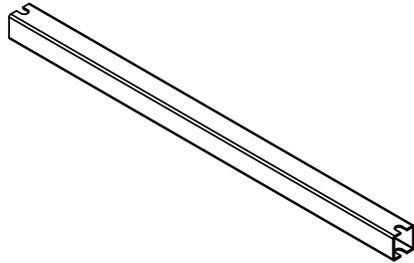


3X. RAIL

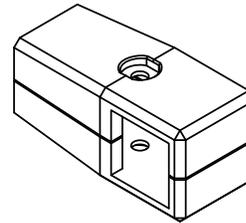


6X. CONNECTOR

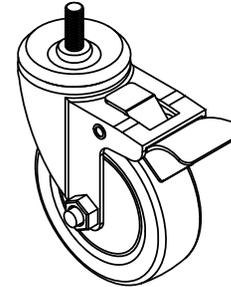

2X. STEM CASTER (3/8-16 TPI,
4 INCH WHEEL ; BRAKE)

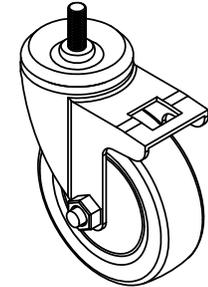

2X. STEM CASTER (3/8-16 TPI,
4 INCH WHEEL ; NONBRAKE)

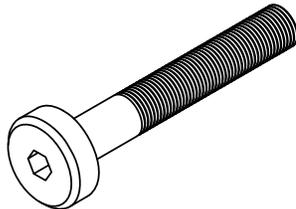


6X. JOINT CONNECTOR BOLT
1/4"-20 X 1 5/8"




6X. HEX NUT
1/4"-20 TPI



6X. JOINT CONNECTOR
BOLT #10-24 X 0.375"

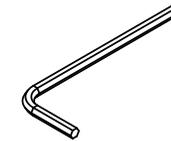


1X. L - KEY FOR 1/4-20

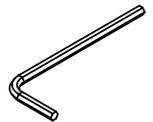


1X. L - KEY FOR #10

STEP 1:

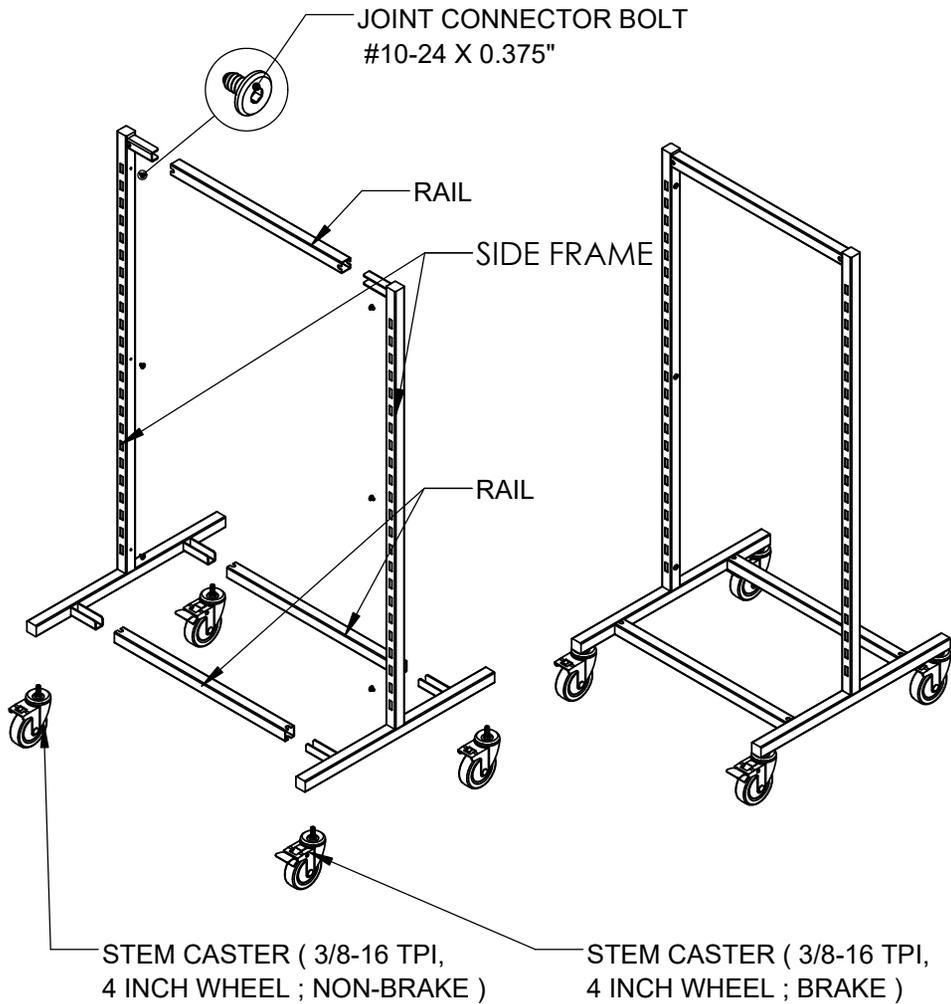

STEP 2:

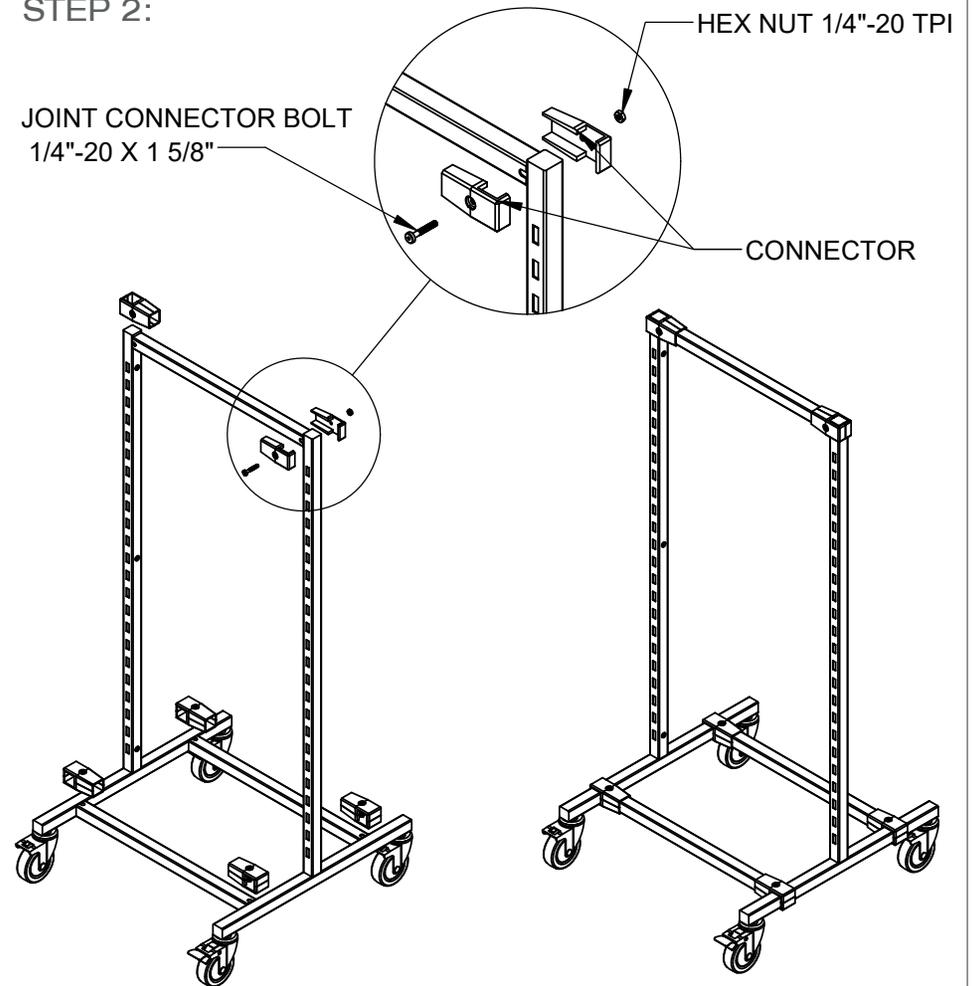

STEP 1: ATTACH THE BRACKETS

Using an Allen wrench, securely screw in each of the four brackets to the inside of the fixture frame. Leave slightly loose for extra wiggle room (these can be tightened later).

STEP 2: REMOVE HEAD

Remove the head/thumb screw from each bracket. This will allow you to mount the back panel.

STEP 3: ALIGN THE HOLES

Align the corresponding holes on the back panel with each of the mounting brackets on the fixture. Take care to properly line them up.

STEP 4: SECURE THE BACK PANEL

Place a silicon washer on each side of the back panel, and then use the head/thumb screw to fasten the back panel in place. Ensure the back panel is securely attached.

